IMPORTANT USER INFORMATION

These notes are provided in the interest of safety.
You must read them before installing or using the appliance.

- This tumble dryer is intended for **NORMAL DOMESTIC USE ONLY.**
- Please note it is not recommended that the dryer be placed directly next to ovens or cookers, as the performance of the dryer may be affected.
- Do not stack the tumble dryer on top of other appliances without the correct stacking kit.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- It is important to clean the lint filter after each drying cycle or the restrictions to airflow will extend drying times and could cause the safety cut-out to trip.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer.
- The tumble dryer should be serviced by an appointed service organisation and only genuine parts used.
- It is dangerous to alter or modify the product in any way other than fitting authorised accessories.
- We recommend that the appliance is unplugged each time after use. It should always be disconnected from the electricity supply if it is to be left unattended for long periods (i.e. weekends, holidays etc.)
- The rear of the dryer gets quite hot during use, position the dryer so that the back is not accessible while in operation, but the sides have a space available to allow airflow.
- It is important to clean fluff from the window of the dryer and around the door seal after each drying cycle. Failure to do so could result in water leaking.
- **DO NOT** use a two-way adaptor, or extension lead. The dryer must be connected to its own socket.
- **DO NOT** block the air inlets at the front and back of your dryer.
- **DO NOT** allow fluff to accumulate around the tumble dryer.
- **DO NOT** exceed the recommended maximum load.
- **DO NOT** allow children to tamper with the controls and keep them away from the dryer when it is in operation.
- **DO NOT** place articles in the dryer if anything other than a water solution has been used in the cleaning process.
- **DO NOT** attempt to dry dripping wet articles or items containing foam rubber or rubber-like materials.
- **DO NOT** use the tumble dryer if you suspect that it is damaged in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury. Consult your local appointed service engineer and insist on genuine spare parts.

THIS APPLIANCE MUST BE EARTHED

GB

IMPORTANT:
PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS APPLIANCE.
KEEP THEM IN A SAFE PLACE FOR FUTURE REFERENCE.

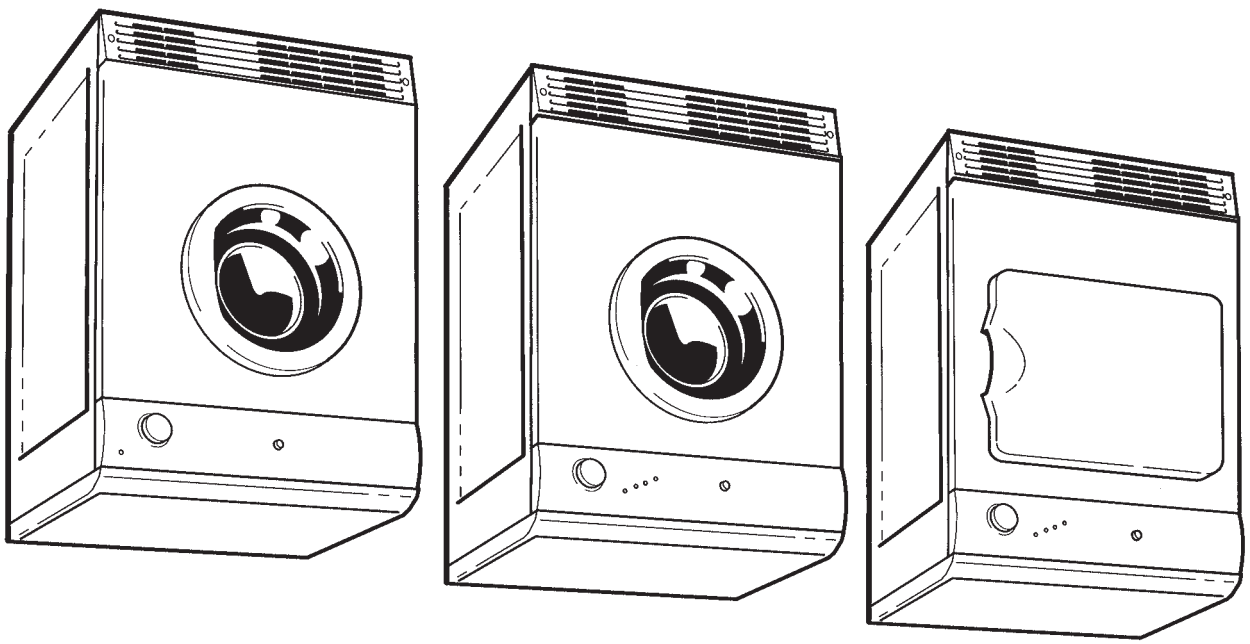

INSTRUCTIONS FOR USE

REVERSING THE DOOR OPENING

Your dryer is fitted with a reversible door. To change the direction of opening procede as follows for your type of door.

Dryers fitted with hinge cover :-

1

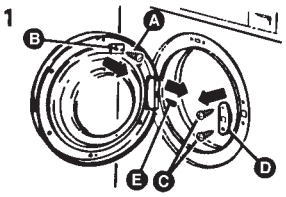

Open the door. Undo screw (A) remove switch strike (B) and replace screw, Remove screws (C) and latch plate (D). Remove hinge cover screw (E). Close the door.

2

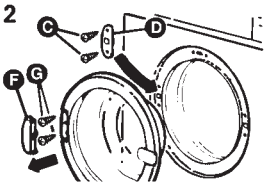

Pull the hinge cover (F) forwards to remove it. Remove two outer screws (G). Remove door. Fit latch plate (D) with screws (C)

3

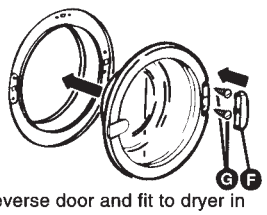

Reverse door and fit to dryer in closed position. Refit screws (G) and hinge cover (F). Open the door.

4

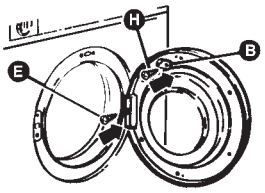

Fit screw (E) to secure hinge cover. Remove screw (H) at top of door and refit switch strike (B) as shown.

Dryers fitted without hinge cover :-

1

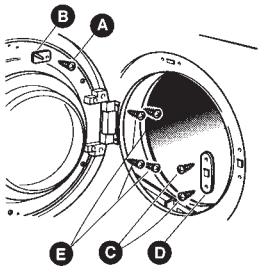

Open the door. Undo screw (A) remove switch strike (B) and replace screw, Remove screws (C) and latch plate (D). Remove hinge block screw (E). Remove door from hinge blocks.

2

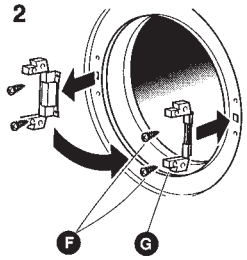

Remove hinge screws (F) and hinge (G) and re fit to opposite side as shown.

3

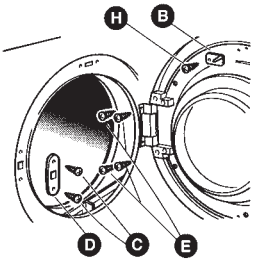

Refit latch plate (D) with screws (C). Remove screw (H) at top of door and re fit switch strike (B) as shown. Fit door to hinge blocks and secure with screws (E)

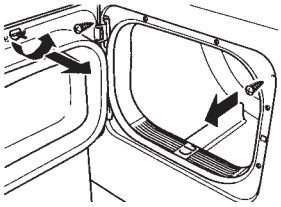

Large Door Opening :-

First remove the child safety peg from the top of the door by rotating 90º anticlockwise. Now unscrew the door hinges from the machine by removing the 4 screws. Do not use a power screwdriver as this may damage the screw threads.
Remove the four screws from the opposite side of the door opening. Place these screws in the hinge holes on the other side of the door opening.
Reverse the door and re apply the hinge screws.
Replace the child safe peg in the top of the, now reversed, door.

OPERATION

Please note it is not recommended that if dryer is used when ambient temperatures are greater than 28˚C (82˚F) or less than 5˚C (41˚F) as performance may be affected.

Open the door.

Load clothes loosely into the drum.

Load sheets first, starting with one corner.

Close the door.

Dry your hands.

Plug in the machine.

If applicable, select correct heat position (see programme chart on control panel for recommendations).

Press the start button.

The drum will rotate in an anticlockwise direction, with all the drying status lights (if fitted) illuminating in sequence i.e. Red/Amber/Green/Green.

If the machine has no load in the drum it will switch off automatically after approximately 7 minutes.

The drum will now begin to rotate and will stop automatically when your clothes are dry. The drum will stop and rotate in the other direction for a short while every few minutes.

If the door is opened during a cycle the dryer will stop and the drum will stop rotating. To restart, close the door and press the start button. This should be avoided if possible as it will interrupt the sensing programme.

There is an automatic 12 minute cool down period at the end of every cycle, during which the heater is switched off. This helps to minimise creasing.

NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM.

To stop the machine during the middle of the programme simply open the door; the drum will stop rotating automatically. To restart, close the door and press the start button. This should be avoided as it interrupts the sensing programme.

AFTER REMOVING THE DRIED CLOTHES:

ALWAYS CLEAN THE FILTER. Failure to clean the filter will extend drying times and could cause the safety cut-out to operate.

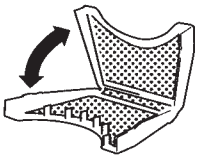

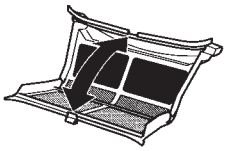

- Pull the filter upwards and away from the appliance.
- Remove any threads or fluff by hand or with a soft brush.
- Slide the filter back.
- Wash the filter occasionally in detergent solution using a soft brush to remove small particles.

ADDITIONAL INFORMATION

ANY PROBLEMS

If the clothes are **not dry** after normal drying time:

- Check that you used the correct heater setting (If applicable).
- Check that the lint filter has been cleaned. A blocked filter will restrict the airflow.
- Check that your dryer is heating - below the door to the right, should feel warm to the touch after the first 10-15 minutes of its programme. Failure to heat may indicate the safety cut-out has operated. To reset, simply press the red button at the rear of the machine. If it has operated, a sharp "click" will be heard. This cut-out only operates if the airflow is severely restricted so make sure the filter is clean, the air inlets and outlets at the front and back are not blocked, and that all other restrictions are removed before re-starting.

  Check that the door striker is in place if the machine has a large door opening.
- Check that the machine has the correct weight load in the drum, this machine will stop after approximately 7 minutes if the drum is empty.

  If the cut-out continues to operate after checking the above points, you should contact your service agent.

If your machine **does not work** check the following before calling a service engineer:

- Check that there is a supply of electricity.
- Check that the door has been properly closed and the machine is switched on.
- Check the plug internal connections.

OPTIONAL EXTRAS

Front to Extendible Rear Venting Kit

To convert your dryer from front venting to extendible rear venting.

Vent Hose

Only available for fixed rear dryers. Leads the warm, damp air to an open door or window.

Wall/Window Vent Kit

To make a permanent connection through a wall or window. Front venting dryers need converting to rear venting before installing this kit (see 'Front to Extendible Rear Venting Kit' above).

Stacking Kit

To enable your dryer to be secured onto the top of a front loading washing machine (to save floor space).

The above items can be purchased as accessories for your tumble dryer from your supplier.

TECHNICAL DATA

OVERALL DIMENSIONS:

Height: 85 cm Width: 59.5 cm Depth: 53 cm

MAXIMUM DRY WEIGHT LOADS:

Cotton 6kg
(for minimum creasing 2kg)
Delicates 2kg

For electrical ratings see plate on back of dryer.
For Model No. see serial plate inside door *(needed when requesting service).*
Room temperature range 2˚C to 25˚C.
Your washing machine should have a spin speed of not less than 800rpm.

INSTALLATION

TUMBLE DRYER VENTING

Your tumble dryer will release warm, damp air in one of these three ways:

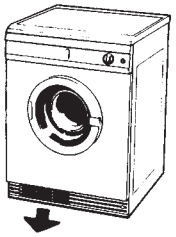

(1) Front Venting. Venting through a grille on the plinth. A kit is available to convert to rear venting.

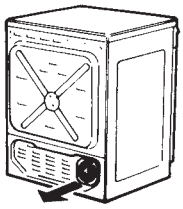

(2) Fixed Rear Venting. Venting through a hole at the bottom of the back panel. A vent hose is available to convert to extendible rear venting.

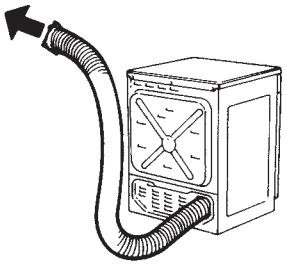

(3) Extendible Rear Venting. This contains a retractable vent hose.

The best solution is to make a permanent connection through either a wall or a window. This is particularly recommended for small, cool rooms and a kit for this purpose is available as an accessory. However, venting arrangement (1) requires that it be converted to rear venting before a permanent connection can be made.

The dryer can be used with or without a vent hose but, when using a vent hose, remember the following points:

- The vent hose must be at least 10cm (4ins) in diameter.
- No more than three right-angled bends should be allowed when positioning the vent hose.
- Do not distort or constrict the vent hose as this will reduce the airflow.
- The vent hose must not be shared with other appliances, for example, a cooker hood outlet.
- When drying, the vent hose must always be extended to an open door or window.

FINAL INSTALLATION

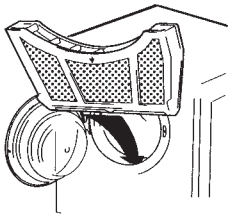

Push the filter into its operating position as shown in the diagram.

If you wish to change the side on which your door opens, see the instructions on the back page.

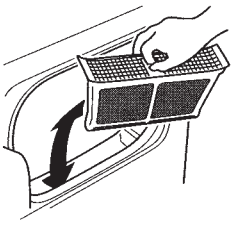

Remove any dust by wiping the drum and door with a damp cloth. Any initial smell from the heater should disappear after the first period of heating.

Position the tumble dryer so that the plug remains accessible after installation.

THE CONTROLS

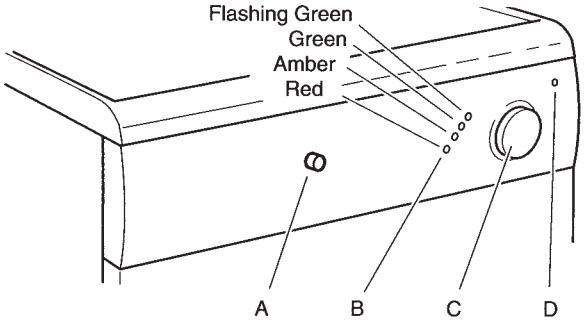

A. HEATER SWITCH. (IF FITTED)
Select the required heat setting based on the recommendations on the control panel.

B. DRYING STATUS. (IF FITTED)

Red-	indicates that the drying cycle has started.
Amber-	indicates that the clothes are nearly dry. This will illuminate approx. 10-12 minutes before the end of the drying cycle.
Green-	indicates that the clothes are ready to be removed from the dryer.
Flashing Green-	indicates that Anti crease is in operation and that the clothes are ready to be removed from the dryer.

C. START BUTTON: To start the drying cycle.

D. NEON (IF 'B' IS NOT FITTED): This neon will light when the dryer has started, and will flash when the programme reaches the anti-creasing stage.Check care labels inside the garments.

PREPARATION

CARE LABELS YOU MAY FIND ON YOUR FABRICS

Suitable for tumble drying
Tumble dry using full heat
Tumble dry using half heat
Do not tumble dry

Do not tumble dry woollen or wool mixture articles unless the article is labelled to be suitable due to a possibility of shrinkage.

Roll dripping wet articles in a towel to remove excess water.

Place delicate articles e.g. tights, scarves, inside a pillowcase.

To avoid the need to iron easycare polyester/cotton items it is better to only dry small loads (i.e half fill drum).

It is better to dry small and large articles together.

We suggest a fabric conditioner to be used to reduce static electricity.

Do not overload the dryer or dry large bulky items such as duvets or sleeping bags as it is important that the airflow through the dryer is not obstructed.

Do not place items contaminated with inflammable substances in the dryer, such as petrol, cleaning solvents, cooking oil, fat, or hair lacquer. These can cause fires. For the same reason, do not dry rubber, foam rubber, plastic or paper.